

Valencia Swing Door Roller Lock Points Adjustment

INTRODUCTION


Roller multipoint locks on Valencia Swing Doors feature adjustability to provide optimal weather seal compression. Each roller lock point has an adjustment cam that pivots about an eccentric axis. This allows for +/- 1 mm adjustments that provide additional weather seal compression or improved gear operation.

ADJUSTMENT


1. Open swing door and locate a roller lock point. There are multiple roller lock points in the locking system.
2. On the face of the roller lock point, locate the positional indicator. This small dot indicates the current positional setting of the roller cam.
 - A. 9 o'clock position = leftmost position.
 - B. 3 o'clock position = rightmost position.
 - C. 6 o'clock position = lowest roller position.
 - D. 12 o'clock position = highest roller position.
3. Insert the hex wrench into the roller cam and turn to move the positional indicator to the desired position. Turn the positional indicator toward the hinge side of the door to increase weather seal compression. The hinge side of the door is the side from which the hinges are visible when the door is closed. Turn the positional indicator away from the hinge side of the door to decrease weather seal compression.
4. Repeat the adjustment for the remaining roller lock points as desired.

TOOLS

4mm or 5/32" hex wrench is required.

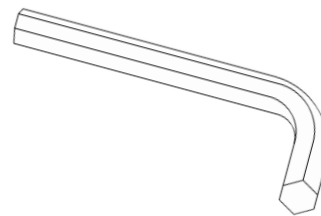

5. Close the door and engage the roller multipoints to test the adjustments.
6. Adjustments may result in over-compression of the weather seal causing difficult lock operation. Re-adjust rollers to reduce weather seal compression when lock operation is undesirable.

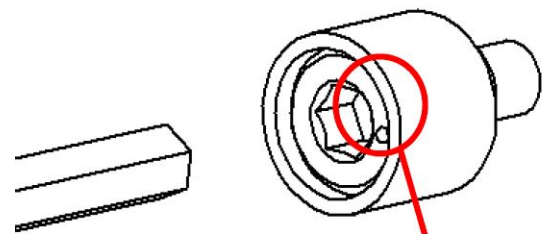

**Positional
indicator**

3 o'clock
position
shown